

neomoscan, niroklar, triformin, weigoman

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Калининград (4012)72-03-81	Омск (3812)21-46-40	Сыктывкар (8212)25-95-17
Ангарск (3955)60-70-56	Калуга (4842)92-23-67	Орел (4862)44-53-42	Тамбов (4752)50-40-97
Архангельск (8182)63-90-72	Кемерово (3842)65-04-62	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Киров (8332)68-02-04	Пенза (8412)22-31-16	Тольятти (8482)63-91-07
Барнаул (3852)73-04-60	Коломна (4966)23-41-49	Петрозаводск (8142)55-98-37	Томск (3822)98-41-53
Белгород (4722)40-23-64	Кострома (4942)77-07-48	Псков (8112)59-10-37	Тула (4872)33-79-87
Благовещенск (4162)22-76-07	Краснодар (861)203-40-90	Пермь (342)205-81-47	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Красноярск (391)204-63-61	Ростов-на-Дону (863)308-18-15	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Курск (4712)77-13-04	Рязань (4912)46-61-64	Улан-Удэ (3012)59-97-51
Владикавказ (8672)28-90-48	Курган (3522)50-90-47	Самара (846)206-03-16	Уфа (347)229-48-12
Владимир (4922)49-43-18	Липецк (4742)52-20-81	Саранск (8342)22-96-24	Хабаровск (4212)92-98-04
Волгоград (844)278-03-48	Магнитогорск (3519)55-03-13	Санкт-Петербург (812)309-46-40	Чебоксары (8352)28-53-07
Вологда (8172)26-41-59	Москва (495)268-04-70	Саратов (845)249-38-78	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Мурманск (8152)59-64-93	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Набережные Челны (8552)20-53-41	Симферополь (3652)67-13-56	Чита (3022)38-34-83
Иваново (4932)77-34-06	Нижний Новгород (831)429-08-12	Смоленск (4812)29-41-54	Якутск (4112)23-90-97
Ижевск (3412)26-03-58	Новокузнецк (3843)20-46-81	Сочи (862)225-72-31	Ярославль (4852)69-52-93
Иркутск (395)279-98-46	Ноябрьск (3496)41-32-12	Ставрополь (8652)20-65-13	
Казань (843)206-01-48	Новосибирск (383)227-86-73	Сургут (3462)77-98-35	
Россия +7(495)268-04-70	Киргизия +996(312)-96-26-47	Казахстан +7(7172)727-132	

neomoscan[®] FA 18

Alkaline detergent for the food industry – liquid concentrate



Main fields of application:

Cleaning of production, filling and packing plants, tanks, containers and pipes via automated CIP processes or circulation processes in the food processing industry, especially for cleaning KEGs, fermentation and storage tanks in breweries.

Active chlorine-free and quat-free cleaning of milking and milk cooling plants and pipes in dairy farms. Especially for the cleaning of automated milking systems (AMS) e.g. of the company Lely.

For professional use only!

Properties:

neomoscan FA 18 is an alkaline detergent with high complexing capacity and the following properties:

- effectively removes organic residues, such as animal and vegetable fats and proteins
- with dispersing and complexing action
- non-foaming
- free of active chlorine, surfactants and phosphates
- suitable for stainless steel and alkali-compatible synthetic materials
- not suitable for copper, brass and other non-ferrous alloys

Abrasion may occur with aluminium and aluminium alloys. To minimize abrasion, we recommend using water with at least approx. 0.9 mmol/l total hardness at temperatures up to 80 °C. This abrasion does not harm equipment made of aluminium with sufficient material thickness, e.g. tanks and KEGs. Other parts and devices made of aluminium must be checked for suitability first.

Dosage:

Automated cleaning of production, filling and packing plants, tanks, containers and pipes (in CIP process):

Depending on application and degree of soiling 0.5 - 3 weight% in the temperature range "cold" up to 80 °C

Cleaning of fermentation and storage tanks (in CIP process):

approx. 2 weight% in the temperature range "cold"

Cleaning of KEGs:

approx. 1 - 2 weight% at temperatures of approx. 60 – 80 °C

Cleaning of milking and milk cooling plants, automated milking systems and pipes:

0.5 weight% at temperatures of 40 – 80 °C for at least 15 – 20 minutes

To remove residues surfaces that come into contact with food must be rinsed with drinking water after every cleaning and disinfection.

Do not mix with other products.

Rinse out dosing system including suction hose with water before changing product.

Die Bedienungsanleitung der Produktions- und Reinigungsanlagen sind zu beachten.

The weigomatic[®] dosing systems resp. neomatik[®] dosing devices by Dr. Weigert enable controlled, safe and economical application. We are a specialist company in accordance with the German Water Conservation Act (Wasserhaushaltsgesetz, WHG). Suited to the individual conditions and requirements we plan, install and maintain central and distributed dosing systems.

Determining concentration:

10 ml neomoscan FA 18 working solution is mixed with 2 drops of phenolphthalein solution and titrated with 0.1N hydrochloric acid until a colour change from red to colourless occurs.

ml 0.1 N hydrochloric acid used x 0.13 = weight% neomoscan FA 18

Technical data:

Appearance:	Yellow, clear liquid
Density (20°C):	approx. 1.37 g/cm ³
pH value (1% in deionised water, 20 °C):	approx. 13

neomoscan[®] FA 18

Alkaline detergent for the food industry – liquid concentrate




Alkaline capacity (ml 0.1 N hydrochloric acid used in titration of 400 mg concentrate against phenolphthalein): approx. 30

The product specification may contain deviating test parameters. These are available on request.

Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:
< 5 % phosphonates, polycarboxylates

Storage information:

Always store at a temperature between -20 °C and 30 °C. Usable for 3 years when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .

Changes in the colour of the product may occur when storing in factory-sealed trade units. This has no impact on the properties of the product, This has no impact on the properties of the product, which are relevant for application.

Hazard and precautionary statements:

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

neomoscan[®] FA 4

Alkaline Detergent for the Food Industry - Liquid concentrate



Main fields of application:

Cleaning of surfaces and equipment, e.g. production plants, containers, floors and surfaces manually (e.g. wiping) as well as via spraying, circulation and immersion methods and via brushing machines; especially suitable for use in high-pressure and steam jet cleaners.
For professional use only.

Properties:

neomoscan FA 4 is a universally applicable, mildly-alkaline and slightly foaming detergent with the following properties:

- excellent cleaning performance (especially against fat and protein deposits)
- emulsifying and degreasing
- excellent dispersing and dirt-carrying ability
- excellent material compatibility
- suitable for stainless steel, mild steel, aluminium, iron, brass, copper, tin, glass and alkali-compatible synthetic materials
- lacquered/varnished and coated surfaces must be tested for suitability first

Dosage:

0.5 - 5 weight% at 40 - 60 °C depending on degree of soiling.

When using very hard industrial water a regular acidic cleaning to prevent resp. to remove lime scale is required.

Surfaces that come into contact with food must be rinsed with drinking water after each cleaning and disinfection to remove residues.

Do not mix with other products.

Rinse out dosing system including suction hose with water before changing product.

Controlled, safe and economical application is ensured by our weigomatic[®] dosing systems. We are a specialist company in accordance with the German WHG (Water Conservation Act). Suited to the relevant conditions and requirements we plan, install and maintain central and distributed dosing units.

Determining concentration:

The working solution concentrations are determined according to a special procedure. A detailed description of the method can be obtained on request.

Technical data:

Appearance:	Clear, yellow liquid
Density (20 °C):	approx. 1.11 g/cm ³
pH value (1 % in deionised water, 20 °C):	approx. 11.5


Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:
< 5 % anionic surfactants
5 - 15 % phosphates
also perfumes

Storage information:

Always store at a temperature between 0 and 30 °C.

Usable for 3 years when stored as recommended.

Expiry date: refer to the stamp mark on the label after the hourglass symbol 

neomoscan[®] FA 4

Alkaline Detergent for the Food Industry - Liquid concentrate



Hazard and precautionary statements:

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.



neomoscan[®] FM plus

Alkaline cleaning agent for the food industry

Liquid concentrate

Fields of application:

- Manual cleaning of surfaces and equipment in the food industry. Application in wiping and via low-pressure cleaning devices and foamers.

Performance spectrum:

neomoscan FM plus is an alkaline cleaning agent with the following properties:

- Highly pronounced effect against stubborn dirt and fat deposits
- Cleans powerfully and quickly
- Foaming adjustment
- Excellent material compatibility
- Suitable for glass, stainless steel and alkali-resistant plastics and seals
- Preliminary testing must be carried out for aluminium, anodised aluminium and light alloys

Application and dosage:

- For daily cleaning and light soiling: 0.5 – 2.0 % (w/w) in the temperature range up to 50 °C
- For heavy dirt and fat deposits, the application concentration can be increased to a maximum of 10 % (w/w).

General notes on application:

- For professional use only.
- In order to avoid product residues, rinse all surfaces with drinking water, especially those that come in contact with food, after each cleaning and disinfection measure.
- Do not mix with other products.
- Rinse out dosing system including suction hoses with water before changing product.
- Dose only from the original container.



- Do not use as a concentrate – only as a working solution.
- Please observe the operating instructions given by the manufacturer of the system/device.
- The weigomatic dosing systems and neomatik dosing devices by Dr. Weigert enable controlled, safe and economical application. We are a specialist company in accordance with the German Water Act (WHG). Suited to the individual conditions and requirements, we plan, install and maintain central and distributed dosing systems.

Determining concentration:

A few drops of Tashiro's indicator are added to 100 ml batch water and titration is performed with 0.1 N hydrochloric acid until the colour changes from green to red/violet (WW value).

A few drops of Tashiro's indicator are added to 100 ml neomoscan FM plus solution and titration is performed with 0.1 N hydrochloric acid until the colour changes from green to red/violet (LW value).

$$(LW - WW) \times 0.14 = \% (w/w) \text{ neomoscan FM plus}$$

Technical data:

Appearance	Clear, yellowish liquid
pH range	11.6–12.8 (0.5 – 10% in fully deionised water, 20 °C)
Density	Approx. 1.1 g/cm ³ (20 °C)
Viscosity	< 100 mPas (concentrate, 20 °C)

The product specification may contain deviating test parameters. This specification can be obtained on request.




Ingredients:

Ingredients for cleaning agents according to Regulation (EC) No. 648/2004 on detergents:

< 5% non-ionic surfactants,
5–15% anionic surfactants,
also fragrances (limonene)

Storage information:

Always store at a temperature between 0 and 30 °C. Usable for 2 years when stored as recommended. For the expiry date, refer to the stamp mark on the label behind the hourglass symbol .

Cloudiness may occur at temperatures below 5 °C and clears up on heating.

Changes in the colour of the product may occur when storing in factory-sealed trade units. This has no impact on the properties of the product which are relevant for application.

Hazard and precautionary statements:

If applied according to the instructions for use, the product is safe according to the applicable guidelines for food processing.

Dispose only when the container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

neomoscan[®] S 11

Alkaline detergent for the food industry – Liquid concentrate



Main fields of application:

Cleaning of surfaces, floors, walls and containers as well as production and filling plants in the food industry using the foam cleaning method via low-pressure and foam cleaning devices and via wiping.

For professional use only!

Properties:

neomoscan S 11 is a foaming, alkaline detergent with the following properties:

- effectively removes organic residues, such as e.g. animal and vegetable fats, protein compounds and other soiling
- excellent foaming activity
- free of active chlorine
- suitable for chrome nickel steel, normal steel, iron, vitreous enamel and alkali-compatible synthetic materials
- not suitable for aluminium and light metal alloys, copper, brass and other non-ferrous metal alloys
- varnished and painted surfaces must be checked for suitability first

Dosage:

Application via low-pressure devices and foam cleaning devices:

1 - 3 % (w/w) at a temperature between 20 °C and 50 °C depending on degree of soiling. In the case of particularly stubborn soiling the concentration can be increased up to 10 % (w/w).

Surfaces that come into contact with food must be rinsed with drinking water after each cleaning and disinfection to remove residues.

Do not mix with other products.

Rinse out dosing system including suction hose with water before changing product.

The instructions of the production and cleaning plants must be observed.

The weigomatic[®] dosing systems resp. neomatik[®] dosing devices by Dr. Weigert enable controlled, safe and economical application. We are a specialist company in accordance with the German WHG (Water Conservation Act). Suited to the relevant conditions and requirements we plan, install and maintain central and distributed dosing units.

Determining concentration:

10 ml of neomoscan S 11 working solution is mixed with 1 - 2 drops of phenolphthalein solution and titrated with 0.1 N hydrochloric acid until the colour changes from red to colourless.

$\text{ml of 0.1 N hydrochloric acid used} \times 0.22 = \% \text{ (w/w) neomoscan S 11}$

Technical data:

Appearance:	clear, brownish liquid
Density (20 °C):	1.29 g/cm ³
pH-value (1 % in deionised water, 20 °C):	approx. 13
Alkaline capacity (ml of 0.1 N hydrochloric acid used in titration of 400 mg of concentrate against phenolphthalein):	approx. 18

The product specification may contain deviating test parameters. These are available on request.

Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:

5-15 % non-ionic surfactants
< 5 % anionic surfactants


neomoscan[®] S 11

Alkaline detergent for the food industry – Liquid concentrate



Storage information:

Always store at a temperature between -20 °C and 30 °C.

Usable for 3 years when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .

Hazard and precautionary statements:

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

neomoscan[®] S 22

Alkaline detergent for the food industry –
Liquid concentrate



Main fields of application: Cleaning of surfaces, floors, walls and containers as well as production and filling plants in the food industry using the foam cleaning method via low-pressure and foam cleaning devices and via wiping.

For professional use only!

Properties: neomoscan S 22 is an alkaline, active chlorine-containing detergent with the following properties:

- thorough removal of protein and fat-containing soiling
- excellent foaming activity for the effective use via foam cleaning devices
- free of perfumes and colourants
- excellent material compatibility
- suitable for stainless steel, brass, copper, aluminium, tin-plated materials, vitreous enamel, synthetic materials (plastic) and rubber

Dosage: Depending on degree of soiling and application, the concentration of neomoscan S 22 is between 1.5 - 5 (w/w) (weight%) in a temperature range of 40 °C – 60 °C.

To remove residues, surfaces that come into contact with food must be rinsed with drinking water after every cleaning and disinfection.

Do not mix with other products.

Rinse out dosing system including suction hose with water before changing product.

The instructions of the production and cleaning plants must be observed.

The weigomatic[®] dosing systems resp. neomatik[®] dosing devices by Dr. Weigert enable controlled, safe and economical application. We are a specialist company in accordance with the German Water Conservation Act (Wasserhaushaltsgesetz, WHG). Suited to the individual conditions and requirements we plan, install and maintain central and distributed dosing systems.

Determining concentration: 2 drops of a 3% hydrogen peroxide solution are added to 10 ml neomoscan S 22 solution; the mixture is shaken briefly and after adding 1-2 drops of phenolphthalein solution, the mixture is titrated with 0.1 N hydrochloric acid until the colour changes from red to colourless.

Consumed ml 0.1 N hydrochloric acid x 0.74 = weight.-% neomoscan S 22

Technical data:

Appearance:	Clear, yellow-brown liquid
Density (20 °C):	1.22 g/cm ³
pH value (1 % in deionised water, 20 °C):	approx. 12
Alkaline capacity (ml of 0.1 N hydrochloric acid used in titration of 400 mg of concentrate against phenolphthalein):	approx. 5
Active chlorine content of a 1 % solution:	approx. 500 mg/l

The product specification may contain deviating test parameters. These are available on request.

Ingredients: Ingredients according to Regulation (EC) No 648/2004 on detergents:
5 – 15 % soap
< 5 % non-ionic surfactants, phosphates, chlorine-based bleaching agents

Storage information: Always store at a temperature between 0 °C and 25 °C. Protect from direct sunlight. Usable for 1 year when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol ⏳

neomoscan[®] Sepa

Alkaline detergent for the food industry -
Liquid concentrate



Properties:

neomoscan Sepa is a alkaline active chlorine containing detergent in a non-foaming formulation.

Main fields of application:

neomoscan Sepa is used for the CIP and other automated cleaning processes in the food industry.

Preferred fields of application are in breweries, the cleaning of brewing and shake-out vessels, whirlpools, plate coolers, wort and beer pipes as well as in periodic basic cleaning of brewing, storage and pressure tanks. Plate heaters, tanks, pipe systems, clarifying separators and wire gauze diatomite filters are cleaned using neomoscan Sepa in fruit wine and fruit juice companies and in wine cellars.

neomoscan Sepa has proven itself many times in difficult cleaning tasks in the food industry, e.g. in removing coffee residues in the manufacturing of coffee extract, fruit and colour residues in the jam industry as well as in cleaning containers in the fish industry.

neomoscan Sepa is suitable for surfaces made of stainless steel, alkali-resistant plastics, copper, brass, glass, enamel and rubber. neomoscan Sepa is not suitable for use on surfaces made of aluminium and aluminium alloys. For these we recommend using products from the neomoscan RD range.

For professional use only.

Dosage:

The application concentrations are 1.5 – 5 % (w/w) in a temperature range of 40 - 85 °C, depending on the level of contamination and the application. In circulation processes in a temperature range of 60 – 85 °C, an action time of 30 minutes is sufficient, even in the case of high levels of contamination.

Surfaces that come into contact with food must be rinsed with drinking water after each cleaning and disinfection to remove residues.

Do not mix with other products.

Rinse out dosing system including hose with water before changing product.

Controlled, safe and economic application is ensured by our weigomatic[®] dosing systems. We are a specialist company in accordance with the German WHG (Water Conservation Law). Suited to the relevant conditions and requirements we plan, install and maintain central and distributed dosing units.

Determining concentration:

The working solution concentrations are determined according to a special procedure. A detailed description of the method can be obtained on request.


Technical data:

Appearance:	Clear, yellow-green liquid
Density (20 °C):	1.27 g/cm ³
pH value (1 % in deionised water):	approx. 12
Alkaline capacity (ml of 0.1 N hydrochloric acid used in titration of 400 mg of concentrate against phenolphthalein):	approx. 12
Active chlorine content in a 1 % solution:	approx. 450 mg/l

Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:
< 5 % chlorine-based bleaching agents, phosphates

Storage information:

Always store at a temperature range between 0 and 25 °C. Do not expose to direct sunlight. Usable for 1 year when stored as recommended. For expiry date refer to the stamp mark on the label behind the hour glass symbol .

neomoscan[®] Sepa

Alkaline detergent for the food industry -
Liquid concentrate



Hazard and precautionary statements:

If applied according to the instructions for use, the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed.
For disposal of product residues, refer to the Material Safety Data Sheet.



neomoscan® TE 350

Alkaline detergent and disinfectant for the food industry

Liquid concentrate



Fields of application:

- Combined cleaning and disinfection of production plants, containers, tanks and pipes in the food industry via automated CIP processes or in the circulation process
- Combined cleaning and disinfection of reusable transport boxes and containers as well as small parts and detachable parts in automated cleaning plants.

Performance spectrum:

neomoscan TE 350 is an alkaline, active-chlorine-containing detergent and disinfectant with the following properties:

- Bactericidal, yeasticidal, fungicidal, virucidal, sporicidal
- Powerfully removes organic soiling, such as animal and vegetable protein and fat
- Foam-free formula
- Included in the IHO¹ list of disinfectants
- Suitable for stainless steel as well as alkali-compatible and active chlorine-compatible plastic and sealings
- Not suitable for aluminium, aluminium alloys and other light metal alloys as well as galvanised materials
- Brass, copper and non-ferrous metal alloys must be tested for suitability first.

Application and dosage:

- Observe the following application parameters, depending on application and desired activity:

Combined cleaning and disinfection (non-pre-cleaned surfaces)	
Bactericidal activity (EN 1276)	27 ml/l (2.7 vol.-%), 5 min, 20 °C

Yeasticidal / fungicidal activity (EN 1650)	13 ml/l (1.3 vol.-%), 15 min, 20 °C
Virucidal activity (EN 14476)	10 ml/l (1.0 vol.-%), 5 min, 20 °C
Sporicidal activity (EN 13704)	33 ml/l (3.3 vol.-%), 15 min, 20 °C

- To increase the cleaning performance the application temperature can be raised to up to 80 °C.

Notes on application:

- For professional use only.
- In order to avoid product residues, rinse surfaces with drinking water, especially those that come in contact with food, after each cleaning and disinfection measure.
- Rinse out dosing system including suction hose with water before changing product.
- Only dose from the original container.
- Do not use as a concentrate – only as a working solution.
- Please observe the operating instructions given by the manufacturer of the system/device.
- The weigomatic dosing systems resp. neomatik dosing devices by Dr. Weigert enable controlled, safe and economical application. We are a specialist company in accordance with the German Water Conservation Act (Wasserhaushaltsgesetz, WHG). Suited to the individual conditions and requirements we plan, install and maintain central and distributed dosing systems.
- *Use disinfectants safely. Always read the label and product information before use.*



Expert reports:

The disinfecting activity has been confirmed by certification. We will be pleased to provide certificates on request.

Determining concentration:

2 drops of a 3% hydrogen peroxide solution are added to 10 ml neomoscan TE 350 solution, the mixture is shaken briefly and after adding 1-2 drops of phenolphthalein solution, the mixture is titrated with 0.1 hydrochloric acid until the colour changes from red to colourless.

ml of 0.1 N HCl used x 0.58 = % (w/w) neomoscan TE 350

Technical data:

Appearance	Clear, yellowish liquid
pH-value	approx 12 (1 % in deionised water, 20 °C)
Density	approx. 1.2 g/cm ³ (20 °C)
Alkaline capacity	approx. 7 (ml of 0.1 N (HCl) hydrochloric acid used in titration of 400 mg concentrate against phenolphthalein)
Active chlorine	approx. 250 mg/l (in 1 % solution)

The product specification may contain deviating test parameters. This specification can be obtained on request.

Ingredients:


Ingredients according to Regulation (EC) No 648/2004 on detergents:

< 5 % phosphates, chlorine-based bleaching agents, polycarboxylates, phosphonates

Active substances in 100 g:

2.5 g sodium hypochlorite

Storage information:

Always store at a temperature between 4 °C and 24 °C. Keep away from sunlight. Usable for 1 year when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .

Changes in the colour of the product may occur when storing in factory-sealed trade units. This has no impact on the properties of the product which are relevant for application.

Hazard and precautionary statements:

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

1 IHO – Industrieverband Hygiene und Oberflächenschutz
[German Association for Hygiene and Surface Protection]



neomoscan[®] TE-S 150

Alkaline detergent and disinfectant for the food industry

Liquid concentrate



Fields of application:

- Combined cleaning and disinfection of surfaces, floors, walls, containers, working surfaces, exterior surfaces of production and filling plants and transport facilities as well as for the general cleaning and disinfection in the food industry via low-pressure and foam cleaning devices as well as via wiping.

Performance spectrum:

neomoscan TE-S 150 is an alkaline, active chlorine-containing detergent and disinfectant with the following properties:

- Bactericidal, yeasticidal, fungicidal, virucidal, sporicidal
- Powerfully removes organic soiling, such as animal and vegetable protein and fat
- High foam activity for use in foam cleaning devices
- Included in the IHO¹-list of disinfectants (added, checked on 19 April 2021)
- Suitable for stainless steel as well as alkali-compatible and active chlorine-compatible plastic and sealings
- Not suitable for aluminium, aluminium alloys and other light metal alloys as well as galvanised materials
- Brass, copper and non-ferrous metal alloys must be tested for suitability first.

Application and dosage:

Observe the following application parameters, depending on application and desired activity:

Combined cleaning and disinfection (non-pre-cleaned surfaces)	
Bactericidal activity (EN 1276, EN 13697)	41 ml/l (4.1 vol.-%), 5 min, 20 °C 35 ml/l (3.5 vol.-%), 15 min, 20 °C
Fungicidal activity (EN 1650, EN 13697)	50 ml/l (5.0 vol.-%), 15 min, 20 °C
Virucidal activity (EN 14476)	10 ml/l (1.0 vol.-%), 5 min, 20 °C
Sporicidal activity (EN 13704)	28 ml/l (2.8 vol.-%), 15 min, 20 °C

- To increase the cleaning performance the application temperature can be raised to up to 50 °C.
- Acidic and/or oxidative detergents and disinfectants must not be used for standing disinfection because of the risk of pitting corrosion on stainless steel. The formation of pitting corrosion is favoured by high chloride contents in the water used, high temperatures and still solutions.

Notes on application:

- For professional use only.
- In order to avoid product residues, rinse surfaces with drinking water, especially those that come in contact with food, after each cleaning and disinfection measure.
- Rinse out dosing system including suction hose with water before changing product.
- Only dose from the original container



- Do not use as a concentrate – only as a working solution.
- Please observe the operating instructions given by the manufacturer of the system/device.
- The weigomatic dosing systems resp. neomatik dosing devices by Dr. Weigert enable controlled, safe and economical application. We are a specialist company in accordance with the German Water Conservation Act (Wasserhaushaltsgesetz, WHG). Suited to the individual conditions and requirements we plan, install and maintain central and distributed dosing systems.
- *Use disinfectants safely. Always read the label and product information before use.*

Expert reports:

The disinfecting activity has been confirmed by certification. We will be pleased to provide certificates on request.

Determining concentration:

2 drops of a 3% hydrogen peroxide solution are added to 10 ml neomoscan TE-S 150 solution, the mixture is shaken briefly and after adding 1-2 drops of phenolphthalein solution, the mixture is titrated with 0.1 hydrochloric acid until the colour changes from red to colourless.

ml of 0.1 N HCl used x 0.53 = % (w/w)
neomoscan TE-S 150

Technical data:

Appearance	Clear, yellowish liquid
pH-value	approx 12 (1 % in deionised water, 20 °C)
Density	approx. 1.2 g/cm ³ (20 °C)
Alkaline capacity	approx. 7 (ml of 0.1 N (HCl) hydrochloric acid used in titration of 400 mg concentrate against phenolphthalein)
Active chlorine	approx. 250 mg/l (in 1 % solution)

The product specification may contain deviating test parameters. This specification can be obtained on request.


Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:

< 5 % phosphates, chlorine-based bleaching agents, polycarboxylates, phosphonates

Active substances in 100 g:
2.5 g sodium hypochlorite

Storage information:

Always store at a temperature between 4 °C and 24 °C. Keep away from sunlight. Usable for 1 year when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .

Changes in the colour of the product may occur when storing in factory-sealed trade units. This has no impact on the properties of the product which are relevant for application.



neomoscan[®] TE-S 150

Hazard and precautionary statements:

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed.
For disposal of product residues, refer to the Safety Data Sheet.

1 IHO – Industrieverband Hygiene und Oberflächenschutz
[German Association for Hygiene and Surface Protection]



Acidic Detergent for the food industry

Liquid concentrate

Fields of application:

- Cleaning of production systems, containers, tanks and lines using automated CIP processes or circulation processes in the food industry.
- Machine cleaning of reusable transport boxes and containers in cleaning systems.

Performance spectrum:

niroklar 2000 contains phosphoric acid and special wetting agents, and has the following properties:

- Powerfully dissolves mineral and other acid-soluble deposits
- Emulsifying action
- Infiltrates organic deposits and supports their removal
- Has a good contaminant-carrying capacity and is easy to stack
- Foam-free upwards of 40 °C
- Material-preserving formulation
- Suitable for stainless steel, rubber and acid-resistant plastics and seals
- Highly-effective corrosion inhibitors largely prevent the attack on light and non-ferrous metals and their alloys, taking into account the application conditions.

Application and Dosage:

- Cleaning using automated CIP processes or circulation processes: The application concentration is 0.5 – 2.5 % (w/w), depending on application, degree of soiling and water hardness, in the temperature range of 40 – 80 °C
- Cleaning of reusable transport boxes and containers in cleaning systems:

The application concentration is 0.3 – 0.5 % (w/w), depending on application, degree of soiling and water hardness, in the temperature range of 50 – 65 °C

- niroklar 2000 must not be mixed with active chlorine-containing cleaning solutions.
- Acidic and/or oxidative detergents and disinfectants must not be used for long-term use due to the risk of pitting corrosion of stainless steel. The formation of pitting corrosion is facilitated by high chloride amounts in the water, high temperatures and still solutions.
- When using niroklar 2000 the items to be washed, the cleaning system and the drain pipes must be acid-compatible.

General notes on application:

- For professional use only.
- In order to avoid product residues, rinse all surfaces with drinking water, especially those that come in contact with food, after each cleaning and disinfection measure.
- Do not mix with other products.
- Rinse out dosing system including suction hoses with water before changing product.
- Only dose from the original container
- Do not use as a concentrate – only as a working solution
- Please observe the operating instructions given by the manufacturer of the system/device
- The weigomatic dosing systems and neomatik dosing devices by Dr. Weigert enable controlled, safe and economical application. We are a specialist company in accordance with the German Water Act (Wasserhaushaltsgesetz, WHG). Suited to the individual conditions and requirements, we plan, install and maintain central and distributed dosing systems.



Determining concentration:

After adding one to two drops phenolphthalein solution, 10 ml of niroklar 2000 solution is titrated with 0.1 N sodium hydroxide (NaOH) until the colour changes from colourless to red.

ml of 0.1 N NaOH used x 0.11 = % (w/w)
niroklar 2000

Technical data:

Appearance	Clear, colourless liquid
pH-value	1.8 (1 % in fully deionised water, 20 °C)
Density	approx. 1.3 g/cm ³ (20 °C)
p-value	approx. - 37 (ml of 0.1 N (NaOH) sodium hydroxide solution used in titration of 400 mg of concentrate against phenolphthalein)

The product specification may contain deviating test parameters. This specification can be obtained on request.


Ingredients:

Ingredients according to Regulation (EC) No. 648/2004 on detergents:

5–15 % anionic surfactants

> 30 % phosphates

Storage information:

Always store at a temperature between -20 and 30 °C. Usable for 3 years when stored as recommended. For the expiry date refer to the stamp mark on the label behind the hourglass symbol .

Changes in the colour of the product may occur when storing in factory-sealed trade units. This has no impact on the properties of the product which are relevant for application.

Hazard and precautionary statements:

If applied according to the instructions for use, the product is safe according to the applicable guidelines for food processing.

Dispose only when the container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

niroklar[®] AR

Acidic detergent for the food industry – Liquid concentrate



Main fields of application:

Exterior cleaning of production and packing plants, tanks and pipes, filling machines and conveyor belts as well as cleaning tiles and glazed tiles of floors and walls in the production, filling and sanitary area.

niroklar AR is applied manually by wiping, via dipping method or suitable cleaning, spraying and low pressure foaming devices.

For professional use only!

Properties:

niroklar AR is an acidic detergent based on phosphoric acid in combination with highly effective wetting agents and emulsifiers and has the following properties:

- universally applicable
- reliably removes mineral deposits and emulsifies greasy, oily and pigment-containing dirt residues
- foaming
- suitable for stainless steel, aluminium, acid-compatible synthetic materials as well as tiles, glazed tiles and acid-proof jointing material. With short contact times the treatment of copper and iron is also possible.
- not suitable for galvanised surfaces

Dosage:

Depending on the degree of soiling and the application 1.0 – 2.0 weight% at temperatures of 40-60 °C.

Surfaces that come into contact with food must be rinsed with drinking water after each cleaning and disinfection to remove residues.

Do not mix with other products.

Rinse out dosing system including hose with water before changing product.

The instructions given by the manufacturer of the production and cleaning plants must be observed.

The weigomatic dosing systems resp. neomatik dosing devices by Dr. Weigert enable controlled, safe and economical application. We are a specialist company in accordance with the German Water Conservation Act (Wasserhaushaltsgesetz, WHG). Suited to the individual conditions and requirements we plan, install and maintain central and distributed dosing systems.

Determining concentration:

10 ml of niroklar AR working solution is mixed with 1 - 2 drops of phenolphthalein solution and is titrated with 0.1 N caustic soda solution until the colour changes from colourless to red.

$\text{ml of 0.1 N caustic soda solution used} \times 0.17 = \text{weight-\% niroklar AR}$

Technical data:


Appearance:	Clear, yellowish liquid
Density (20 °C):	approx. 1.2 g/cm ³
pH value (1 % in deionised water, 20 °C):	1.8
Acid capacity (ml of 0.1 N NaOH used in titration of 400 mg concentrate against phenolphthalein):	approx. – 24

The product specification may contain deviating test parameters. This specification can be obtained on request.

Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:
< 5 % anionic surfactants
5 - 15 % non-ionic surfactants
15 – 30 % phosphates

Storage information:

Always store at a temperature between -10 °C and 30 °C. Usable for 3 years when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .

niroklar[®] S 55

Acid detergent for the food industry - Liquid concentrate



Main fields of application:

Cleaning of exterior surfaces of tanks, containers, pipes as well as conveyor belts, filling plants, working utensils, surfaces, walls and floors in the food industry.

To be used in a foam process via low pressure and foam cleaning devices.

For professional use only.

Properties:

niroklar S 55 is an acidic detergent based on a combination of phosphoric acid and foam-active anionic surfactants with the following properties

- Effectively solves mineral deposits such as limescale and boiler scale
- Rapidly infiltrates organic deposits such as fat and protein
- Forms stable foam when used in low pressure or foam cleaning devices
- Suitable for stainless steel, rubber, acid-compatible synthetic materials, aluminium
- Acid-sensitive non-ferrous metals and non-ferrous metal alloys, such as copper and tin, may only come into contact with a diluted niroklar S 55 solution for a short time

Dosage:

Depending on the degree of soiling 2 – 3 weight%. With especially stubborn deposits the concentration can be increased to 10 weight%. The usual temperature range is 20 °C – 40 °C.

Surfaces that come into contact with food must be rinsed with drinking water after each cleaning and disinfection to remove residues.

Do not mix with other products.

Rinse out dosing system including hose with water before changing product.

The weigomatic[®] dosing systems resp. neomatik[®] dosing devices by Dr. Weigert enable controlled, safe and economical application. We are a specialist company in accordance with the German Water Conservation Act (Wasserhaushaltsgesetz, WHG). Suited to the individual conditions and requirements we plan, install and maintain central and distributed dosing systems.

Determining concentration:

After adding 1 - 2 drops of phenolphthalein solution, 10 ml of niroklar S 55 working solution is titrated with 0.1 N caustic soda solution until the colour changes from colourless to red.

ml of 0.1 N caustic soda solution used x 0.13 = weight-% niroklar S 55


Technical data:

Appearance:	Clear, yellowish liquid
Density (20 °C):	approx. 1.28 g/cm ³
pH value (1 % in deionised water, 20 °C):	approx. 2.1
Acid capacity (ml of 0.1 N NaOH used in titration of 400 mg of concentrate against phenolphthalein):	approx. - 31

Ingredients:


Ingredients according to Regulation (EC) No 648/2004 on detergents:
5 - 15 % anionic surfactants
> 30 % phosphates
also perfume (limonene)

Storage information:

Always store at a temperature between -20 °C and 30 °C. Usable for 2 years when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .



triformin[®] care

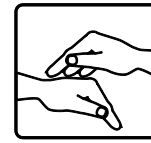

Skin care cream

Fields of application:

- Skin care after working and in breaks in the public health sector such as in hospitals, clinics, doctors' practices, nursery homes, in chemical and pharmaceutical fields as well as in food processing companies such as professional kitchens, butchers' shops and dairies.

Performance spectrum:

- Very rich oil/water emulsion
- Especially for the care of stressed and dry skin
- Smoothens the skin perceptibly and protects it against the loss of moisture
- Very gentle to the skin, confirmed in dermatological reports

Special Properties:

- Effective care with high quality jojoba oil
- Absorbed rapidly
- Keeps the skin smooth and elastic
- Free of perfumes
- Also suitable for the skin care of the whole body

Application and dosage:

Apply triformin care on the clean and dry skin and rub it in thoroughly.

For an optimum skin care triformin care should be used regularly after hand cleaning in breaks or after work.

For protecting the skin we recommend the use of the special skin protection cream triformin protect before work.

In addition to regular skin care with triformin care we recommend a gentle hand cleaning with triformin HR or hygienic hand washing with the hand decontaminant triformin decon.

General instructions on use:

- For professional use only
- For dosing triformin care from the 500 ml bottle we recommend the triformin dispenser 500
- Do not mix with other products



Technical data:

pH-value	approx. 5.0 (concentrate, 20 °C)
viscosity	< 10 Pa s (concentrate, 20 °C)
density	0.97 g/cm ³

Ingredients:

Aqua
Alcohol Denat.
Palmitic Acid
Stearic Acid
Paraffinum Liquidum
Propylene Glycol
Simmondsia Chinensis (Jojoba) Seed Oil
Glyceryl Stearate
Ceteareth-20
Dimethicone
Triisononoin
Sodium Dihydroxycetyl Phosphate
Capryl Glycol
Xanthan Gum
Galactoarabinan
Glycerin
Lactic Acid
Serine
Sodium Lactate
Sorbitol
TEA-Lactate
Urea
Sodium Chloride
Sodium Benzoate
Allantoin

Storage information:

Always store at a temperature ranging between 10 and 30 °C.

The closed bottles and tubes of triformin care can be stored for at least 30 months. Usable for 12 months after opened first.

Hazard warnings and safety advice:

triformin care is not a hazardous product according to the CLP-Regulation (EC) No 1272/2008

Dispose only when container is empty and closed. For disposal of product residues, refer to the Material Safety Data Sheet.

Sales unit	Content
bottles	6 x 500 ml
tubes	12 x 100 ml



triformin® safeDIS



Hand disinfectant

Ready-for-use solution

Fields of application:

- Hygienic hand disinfection

Performance spectrum:

- Bactericidal, yeasticidal and virucidal (including norovirus)
- VAH¹-listed

Special properties:

- With skin care and re-moisturising components
- Excellent skin tolerance, confirmed in dermatological reports
- Alcohol-based, free of colouring agents and perfumes and therefore suitable for the food industry

Application and dosage:

For hygienic hand disinfection apply 3 ml triformin safeDIS on the clean and dry skin and allow it to act for 30 sec. Keep your hands moist when disinfecting them with triformin safeDIS and observe the correct rubbing method for disinfecting all parts of your hands.

Hygienic hand disinfection	
bactericidal, yeasticidal and virucidal activity	3 ml – 30 sec

In addition to hygienic hand disinfection with triformin safeDIS we recommend the skin care cream triformin care and the skin protection cream triformin protect.

General instructions on use:

- For professional use only
- For dosing triformin safeDIS from the 1,000 ml bottle we recommend the triformin dispenser 1.0 resp. from the 500 ml bottle the triformin dispenser 0.5
- Do not mix with other products
- Storage and transport is only permitted in original packaging
- *Use disinfectants safely. Always read the label and product information before use*

Technical data:

pH-value	3.4 (ready-for-use-solution, 20 °C)
Viscosity	1.5 mPa s
Density	0.9 g/cm ³ (20 °C)
Flashpoint	19.5 °C according to Abel-Pensky


Ingredients:

Active substances in 100 g:
64.0 g ethanol
8.0 g propan-1-ol

Storage information:

Keep container tightly closed. Always store at a temperature between -20 °C and +30 °C. Do not expose to direct sunlight.

Usable for 36 months when stored as recommended.

For expiry date refer to the stamp mark on the label behind the hourglass symbol .

In-use shelf life: 6 months.



triformin[®] safeDIS

Hazard and precautionary statements:


If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed.
For disposal of product residues, refer to the Safety Data Sheet.

¹ Association of Applied Hygiene



triformin[®] wash

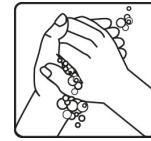

Washing lotion

Ready-to-use solution

Field of application:

- For frequent daily hand and body cleansing in the healthcare sector such as e.g. hospitals, clinics, doctors' practices, nursing homes, in chemical, cosmetical and pharmaceutical fields as well as in food processing areas e.g. in professional kitchens, butcher's shops and dairies

Activity spectrum:

- Very economical mild washing lotion
- Especially suitable for normal, dry and sensitive skin
- Suitable for body hygiene
- Excellent skin tolerance, confirmed by dermatological certificates

Special Properties:

- Based on natural plant-based raw materials
- Mild skin care
- pH-neutral
- With aloe vera and natural honey
- Free of soaps and alkali

Application and dosage:

For cleansing hands apply approx. 3 ml triformin wash on the moist skin and distribute evenly. Observe the correct washing technique to thoroughly cleanse the hands. Rinse with plenty of fresh water. Then thoroughly dry with disposable towel.

For body cleansing apply triformin wash onto the moist skin, rub thoroughly and rinse.

General instructions on use:

- For professional use only
- triformin wash is subject to the European Regulation on cosmetic products EC 1223/2009 as well as the GMP for cosmetics (Good Manufacturing Practice)

- For dosing triformin wash from the 1 L and 500 ml bottle we recommend the triformin dispenser 1.0 or triformin dispenser 0.5 from the Dr. Weigert triformin dispenser range
- In addition to cleansing with triformin wash, we recommend using the skin care lotion triformin care and the skin protection lotion triformin protect

Technical data:

pH range	approx. 5.5 - 5.9 (concentrate, 20 °C)
viscosity	1,800 - 2,600 cP (concentrate, 20 °C)
density	1.0 g/cm ³ (20 °C)

Ingredients:

Aqua, Sodium Laureth Sulfate, Sodium Chloride, Glycerin, Aloe Barbadensis Extract, Cocamidopropyl Betaine, Glycol Distearate, Laureth-4, Parfum, Methylchloroisothiazolinone, Methylisothiazolinone, Citric Acid, Mel, Linalool

Storage information:


Closed containers of triformin wash can be stored for at least 30 months at room temperature. Shelf life after opening: 12 months.

Hazard warnings and safety advice:

Dispose only when container is empty and closed.



triformin[®] wash pure

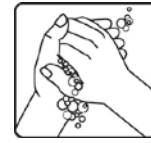

Washing lotion

Liquid concentrate

Field of application:

- Frequent daily hand and body cleansing in the healthcare sector such as e.g. hospitals, clinics, doctors' practices, nursing homes as well as in professional kitchens, chemical, cosmetic and pharmaceutical areas

Activity spectrum:

- Very economical mild washing lotion
- Especially suitable for normal and dry skin
- Also suitable for body hygiene
- Excellent skin tolerance, confirmed by dermatological certificates

Special properties:

- Free of perfume and colouring agents
- Mild care product
- With lipid replenishing components and moisturising glycerin
- Free of soaps and alkali

Application and dosage:

For cleansing hands apply approx. 3 ml triformin wash pure on the moist skin and distribute evenly. Observe the correct washing technique to thoroughly cleanse the hands. Rinse with plenty of fresh water. Then thoroughly dry with disposable towel.

For body cleansing apply triformin wash pure onto the moist skin, rub thoroughly and rinse.

General instructions on use:

- For professional use only.
- triformin wash pure is subject to the European Regulation on cosmetic products EC 1223/2009 as well as the GMP for cosmetics (Good Manufacturing Practice)

- For dosing triformin wash pure from the 1 L and 500 ml bottle we recommend the triformin dispenser 1.0 or triformin dispenser 0.5 from the Dr. Weigert triformin dispenser program
- In addition to cleansing with triformin wash pure we recommend the use of the skin care cream triformin care and the skin protection cream triformin protect

Technical data:

pH range	approx. 6.0 – 7.0 (concentrate, 20 °C)
viscosity	800 – 2.000 cP (concentrate, 20 °C)
density	approx. 1.0 – 1.1 g/cm ³ (20 °C)

Ingredients:

Aqua, Sodium Laureth Sulfate, Sodium Chloride, Glycerin, Glycol Distearate, Laureth-4, Cocamidopropyl Betaine, Methylchloro-isothiazolinone, Methylisothiazolinone, Citric acid, Magnesium Nitrate, Magnesium Chloride

Storage information:

Always store at a temperature between 5 °C and 30 °C. Factory-sealed containers of triformin wash pure can be stored for at least 30 months at room temperature.

In-use shelf life: 12 months.

Hazard and precautionary statements:

Dispose only when container is empty and closed.



weigoman[®] pure



Alcohol-based hand disinfectant

Ready-to-use solution

Main field of application:

- Hygienic and surgical hand disinfection

Performance spectrum:

- Bactericidal, yeasticidal, tuberculocidal activity and activity against enveloped viruses have been confirmed by certification in accordance with European standards
- Active against Norovirus

Special properties:

- With highly active and synergetically acting moisturisers for improved skin tolerance
- Free of perfumes and colourants
- Suitable for sensitive skin
- Included in the IHO¹ list of disinfectants

Application and dosage:

For hygienic hand disinfection rub weigoman pure undiluted into the skin of the hands and keep it wet for 30 seconds.

For surgical hand disinfection repeatedly rub weigoman pure undiluted onto the hands and lower arms; keep wet for 1.5 minutes.

Ensure that problem areas (gaps between fingers, nail folds) are continuously kept wet.

Hygienic hand disinfection: Bactericidal (EN 13727, EN 1500), yeasticidal (EN 13624), tuberculocidal (EN 14348), virucidal activity against enveloped viruses (EN 14476), active against Norovirus (MNV) (EN 14476)	30 s
Surgical hand disinfection (EN 13727, EN 12791)	1.5 min

Notes on application:

- For professional use only.
- For dosing weigoman pure from the 1,000 ml bottle, we recommend using the triformin dispenser 1.0 resp. when dosing from the

500 ml bottle please use the triformin dispenser 0.5.

- Do not mix with other products.
- Storage and transport is only permitted in original packaging.
- *Use disinfectants carefully. Always read label and product information before use.*

Technical data:

pH-value	approx. 5.7 (in deionised water, 1:2 v/v)
Density	approx. 0.8 g/cm ³
Flash point	21 °C DIN 51755

Ingredients:


Active substances in 100 g:

63.14 g 2-propanol

14.3 g 1-propanol

Storage information:

Keep container tightly closed. Do not store above 25 °C. Protect from direct sunlight.

Usable for 36 months when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .

When opened use up within 6 months.

Hazard and precautionary statements:

Dispose only when container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

¹ Industrieverband für Hygiene und Oberflächenschutz
[German Association for Hygiene and Surface Protection]

Brewery	Alkaline cleaners						Acid cleaners						Additives						Disinfectants				Special products							
	neomoscan® FA 18	neomoscan® FA 19	neomoscan® Sepa	neomoscan® S 11	neomoscan® S 33	neomoscan® FA 4	niroklar® Sauer flüssig	niroklar® SF	niroklar® 66	niroklar® 88	niroklar® 2000	niroklar® S 55	niroklar® AR	doscan® RV-O	doscan® RV-O plus	doscan® RV 4	doscan® RV 665	doscan® F 85	doscan® RV-S	doscan® AS 627	doscan® PS	neoseptal® PE 15 ¹	neoform® K sprint ¹	neoform® K dis ¹	neomoscan® TE-S 150 ¹	neomoscan® TE 350 ¹	caraform® universal	neomoscan® G 15	neomoscan® G 7	
	free of surfactants, for CIP, suitable for aluminium	free of surfactants, for CIP	active chlorine, free of surfactants, for CIP	foaming	foaming, mildly alkaline, material compatible	foaming	nitric acid, free of surfactants, for CIP	nitric and phosphoric acid, free of surfactants, for CIP	sulphuric acid, inhibitors, free of surfactants	phosphoric acid, defoaming ⁵ , for CIP	phosphoric acid, defoaming ⁴ , for CIP	phosphoric acid, foaming	phosphoric acid, foaming	for alkaline CIP-solutions, active oxygen, free of surfactants	for alkaline CIP-solutions, active oxygen and surfactants	for alkaline CIP-solutions, defoaming ⁵	universal for alkaline CIP-solutions and BWM ² , free of surfactants	cleaning enhancer and defoamer BWM ²	for acid (nitric acid) CIP-solutions, inhibitors, free of surfactants	defoamer BWM ² , PET-compatible	scale inhibitor, pH-independent	peracetic acid (15 %), free of surfactants	alcohols, residue-free drying	disinfecting cleaner, amines, foaming	disinfecting cleaner, active chlorine, foaming	disinfecting cleaner, active chlorine	all-purpose cleaner	synthetic chain lubricant, PET-compatible	synthetic chain lubricant, PET-compatible	
CIP brewhouse	⊙	⊙	*				●	⊙						⊙	●	⊙			⊙			●								
CIP fermenting/storage																														
Flotation/yeast tanks	⊙	⊙	*				●	⊙						⊙	*	●	⊙			⊙			●				⊙			
Tanks/pipes	⊙	⊙	*				●	⊙		●				⊙	*	●	⊙			⊙			●				⊙			
CIP filter cellar																														
Filters	⊙	⊙	*				●							⊙		●	⊙					⊙								
Bright beer tanks	⊙	⊙	*				●	⊙	⊙					⊙		⊙	⊙			⊙			●				⊙			
Bottle washing																														
Caustic bath																	●	⊙		●										
Rinsing zones										⊙											●									
Disinfection																						●								
Keg cleaning/filling																														
Keg cleaning	⊙	⊙					⊙	●			⊙					●	⊙										⊙			
CIP filler	●	⊙	⊙				●	⊙							⊙	⊙						●				⊙				
Chain lubrication																												●	⊙	
Crate cleaning										●																				
Surfaces/devices/equipment																														
Filling equipment, exterior				●	⊙							●												●	●	⊙				
Foam cleaning				●	⊙						⊙	●													⊙					
Manual applications						●																	●	⊙				⊙		

Recommendation ●
Alternative ⊙
Basic cleaning *

The data of this table represents only a small selection of our offered range of products. The neomoscan team creates custom-tailored cleaning and disinfection concepts. Please contact us. Before using the product, please note the specific parameters for use and the advice on material compatibility.
¹ Use disinfectants safely. Always read the label and product information before use.
² BWM = Bottle Washing Machine
⁴ defoaming at warm to hot temperatures
⁵ defoaming at low and high temperatures

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Россия +7(495)268-04-70

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Киргизия +996(312)-96-26-47

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Саранск (8342)22-96-24
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Казахстан +7(7172)727-132

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93